



PC 3

Plastic ceiling loudspeaker




PC 3

Dual cone plastic ceiling loudspeaker with built-in 100V transformer, metal grill, fire housing, white colour. PC 3 is perfect for recessed, nearly invisible fit.

Designed to be mounted recessed in hanging false ceilings or panels, the **PC 3** is ideal for background music and announcements. It features a multiple socket line transformer for use in constant voltage systems. The transformer taps allow to select the output power from among 4 different values. Prepared for connection to an amplifier by means of screw terminals. This loudspeaker is your budget's solution.

| TECHNICAL SPECIFICATIONS | PC 3 |
|--------------------------------|---|
| Rated power | 8 W (8 Ω) |
| Transformer power taps | 6 W – 3 W – 1.5 W |
| Sensitivity (1 m/1 W) | 87 dB |
| Maximum SPL | 95 dB |
| Frequency response | 150 Hz – 20 kHz |
| Dispersion at 1000 Hz, degrees | 90° conical |
| Driver dimensions | 76 mm woofer, 13 mm tweeter |
| Dimensions | Ø 114 mm × 76 mm |
| Protection | IPX 4 |
| Weight | 0,55 kg |
| Material | ABS plastic housing, stainless steel U bracket & hardware |
| Colour | White (WT) |

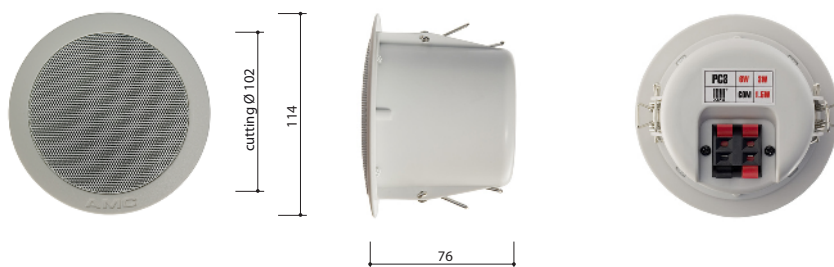

unit: mm