


TECHNICAL SPECIFICATIONS

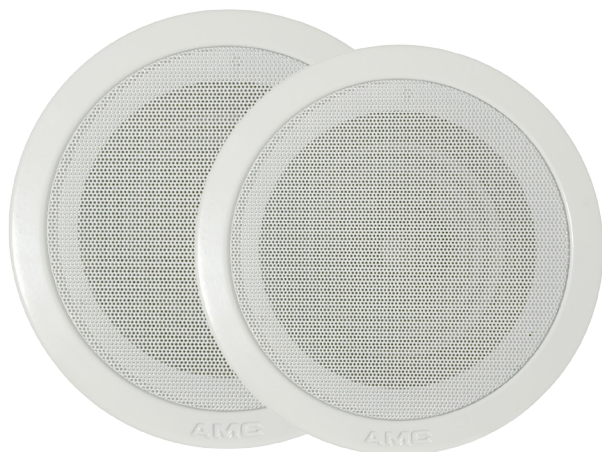

MC


MC - metal ceiling loudspeakers with built-in 100V transformer. Ultra slim speaker's construction designed for low installation depth.

Quick fit clamps allow easy and quick mounting into false ceilings. **MC** loudspeakers have powerful middle frequency sound reproduction and high sound pressure level. **MC** is perfect for speech announcements in emergency systems where public address is main requirement.

	MC 4T	MC 4TA	MC 5T
Rated power	6 W	6 W	6 W
Transformer power taps	6 W - 3 W	6 W - 3 W - 1,5 W	6 W - 3 W
Sensitivity	90 dB (1 W/1 m)	90 dB (1 W/1 m)	91 dB (1 W/1 m)
Maximum SPL	97 dB (Pmax/1 m) at 7430 Hz	97 dB (Pmax/1 m) at 7430 Hz	98 dB (Pmax/1 m) at 4557 Hz
Driver impedance	8 Ω	8 Ω	8 Ω
Frequency response	110 Hz – 15 kHz	110 Hz – 15 kHz	110 Hz – 15 kHz
Dispersion at 1000 Hz	120° conical	120° conical	120° conical
Driver dimensions	100 mm full range	100 mm full range	130 mm full range
Dimensions	∅ 180 mm × 50 mm	∅ 180 mm × 50 mm	∅ 200 mm × 54 mm
Weight	0,7 kg	0,7 kg	0,75 kg
Material	Iron	Iron	Iron
Colour	White (RAL 9016)	White (RAL 9016)	White (RAL 9016)

unit: mm

MC 4T / MC 4TA

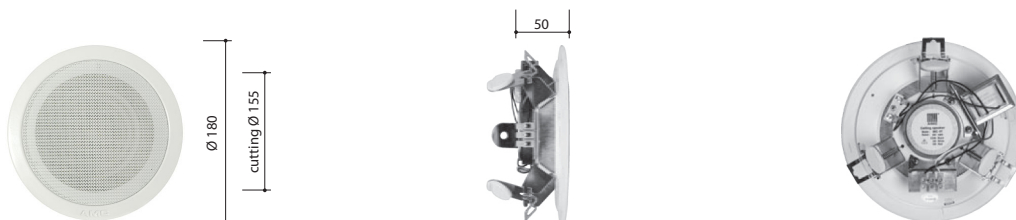

MC 5T

